

Remote Control

1. Away Arm Button
2. Disarm Button
3. Panic Button
4. Home Arm button
5. LED Indicator
6. Back Cover

Remote Control (Danish)

1. Arm Button
2. Disarm Button
3. Panic Button
4. Home Arm button
5. LED Indicator
6. Back Cover

Kauko-ohjain

1. HÄLY päällä
2. HÄLY pois
3. Paniikkinappi
4. Kotona HÄLY
5. LED merkkivalo
6. Takakansi

ENGLISH

Getting Started

1. Slide open the back cover, insert the battery provided and close the back cover.
2. If the accessory is purchased separately from the kit, follow instruction below to include the accessory into your control panel
If the accessory is already included in your alarm system, skip step 3~5.
3. Put the Control Panel into learning mode.
4. Press any of the buttons to learn the Remote Control.
5. Refer to Control Panel manual to complete learning process.

Operation

- Press the **Away Arm** button to away arm your alarm system.
- Press the **Home Arm** button to home arm your alarm system.
- Press the **Disarm** button to disarm your alarm system.
- Press and hold the **Panic** button for 3 seconds to activate a Panic alarm regardless of system mode.
- The LED will light up whenever any button is pressed.

Battery

The Remote Control uses one **CR2032 3V** lithium battery. It features low battery detection function to notify the Control Panel when battery voltage is low.

When the Remote Control is on low battery, follow the procedure below to change the batteries.

1. Slide open the back cover
2. Remove the old battery
3. Insert the new batteries observing correct polarity
4. Replace the back cover.

Specification

Environmental Condition:

-10°C to 40°C, relative humidity 85% non-condensing.

Radio:

868 MHz

DANISH

Getting Started

1. Slide open the back cover, insert the battery provided and close the back cover.
2. If the accessory is purchased separately from the kit, follow instruction below to include the accessory into your control panel
If the accessory is already included in your alarm system, skip step 3~5.
3. Put the Control Panel into learning mode.
4. Press any of the buttons to learn the Remote Control.
5. Refer to Control Panel manual to complete learning process.

Operation

- Press the **Away Arm** button to away arm your alarm system.
- Press the **Home Arm** button to home arm your alarm system.
- Press the **Disarm** button to disarm your alarm system.
- Press and hold the **Panic** button for 3 seconds to activate a Panic alarm regardless of system mode.
- The LED will light up whenever any button is pressed.

Battery

The Remote Control uses one **CR2032 3V** lithium battery. It features low battery detection function to notify the Control Panel when battery voltage is low.

When the Remote Control is on low battery, follow the procedure below to change the batteries.

1. Slide open the back cover
2. Remove the old battery
3. Insert the new batteries observing correct polarity
4. Replace the back cover.

Specification

Environmental Condition:

-10°C to 40°C, relative humidity 85% non-condensing.

Radio:

868 MHz

SUOMI

Käyttöönotto

1. Liu'uta takakansi auki, aseta mukana seuraava paristo laitteeseen ja sulje kansi.
2. Jos laite on hankittu lisälaitteena hälytinpakettiin, seuraa allaolevia ohjeita yhdistääksesi sen keskusyksikköön. Jos laite on tullut paketin mukana, ohita kohdat 3~5.
3. Aseta keskusyksikkö yhdistämistilaan.
4. Paina mitä tahansa näppäintä kauko-ohjaimessa.
5. Katso lisäohjeita yhdistämisprosessista keskusyksikön käyttöoppaasta.

Käyttö

- Paina **HÄLY päällä** painiketta asettaaksesi kaikki hälytykset päälle.
- Paina **Kotona HÄLY** painiketta asettaaksesi vain ulkoiset ilmaisimet hälyttämään.
- Paina **HÄLY pois** painiketta kytkeäksesi hälytin pois päältä.
- Paina ja pidä pohjassa **Paniikkinappia** 3 sekunnin ajan ja paniikkihälytys suoritetaan riippumatta keskusyksikön toimintatilasta..
- LED merkkivalo syttyy kun mitä tahansa näppäintä painetaan.

Paristo

Kauko-ohjain käyttää yhtä **CR2032 3V** litium-paristoa. Se ilmoittaa keskusyksikölle pariston vaihtamistarpeesta. Kun paniikkinapin paristo on heikko, vaihda paristo seuraavasti.

1. Avaa takakansi.
2. Poista vanha paristo.
3. Aseta uusi paristo (tarkista napaisuus).
4. Laita takakansi kiinni.



Tekniset tiedot

Käyttöympäristö:

-10°C - 40°C, ilmankosteus 85% ei-tiivistyvää kosteutta.

Radio:

868 MHz

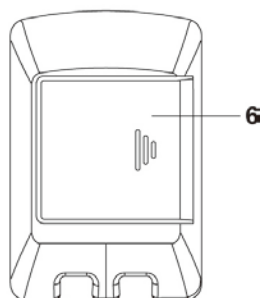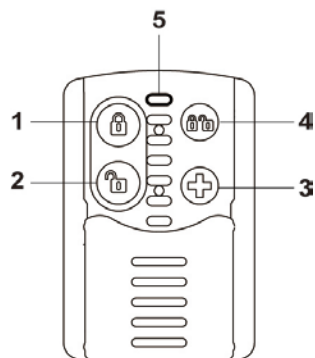

Remote Control (Swedish)

1. Arm Button
2. Disarm Button
3. Panic Button
4. Home Arm button
5. LED Indicator
6. Back Cover

Remote Control (Norwegian)

1. Arm Button
2. Disarm Button
3. Panic Button
4. Home Arm button
5. LED Indicator
6. Back Cover

Swedish

Getting Started

1. Slide open the back cover, insert the battery provided and close the back cover.
2. If the accessory is purchased separately from the kit, follow instruction below to include the accessory into your control panel
If the accessory is already included in your alarm system, skip step 3~5.
3. Put the Control Panel into learning mode.
4. Press any of the buttons to learn the Remote Control.
5. Refer to Control Panel manual to complete learning process.

Operation

- Press the **Away Arm** button to away arm your alarm system.
- Press the **Home Arm** button to home arm your alarm system.
- Press the **Disarm** button to disarm your alarm system.
- Press and hold the **Panic** button for 3 seconds to activate a Panic alarm regardless of system mode.
- The LED will light up whenever any button is pressed.

Battery

The Remote Control uses one **CR2032 3V** lithium battery. It features low battery detection function to notify the Control Panel when battery voltage is low.

When the Remote Control is on low battery, follow the procedure below to change the batteries.

1. Slide open the back cover
2. Remove the old battery
3. Insert the new batteries observing correct polarity
4. Replace the back cover.

Specification

Environmental Condition:

-10°C to 40°C, relative humidity 85% non-condensing.

Radio:

868 MHz

Norwegian

Getting Started

1. Slide open the back cover, insert the battery provided and close the back cover.
2. If the accessory is purchased separately from the kit, follow instruction below to include the accessory into your control panel
If the accessory is already included in your alarm system, skip step 3~5.
3. Put the Control Panel into learning mode.
4. Press any of the buttons to learn the Remote Control.
5. Refer to Control Panel manual to complete learning process.

Operation

- Press the **Away Arm** button to away arm your alarm system.
- Press the **Home Arm** button to home arm your alarm system.
- Press the **Disarm** button to disarm your alarm system.
- Press and hold the **Panic** button for 3 seconds to activate a Panic alarm regardless of system mode.
- The LED will light up whenever any button is pressed.

Battery

The Remote Control uses one **CR2032 3V** lithium battery. It features low battery detection function to notify the Control Panel when battery voltage is low.

When the Remote Control is on low battery, follow the procedure below to change the batteries.

1. Slide open the back cover
2. Remove the old battery
3. Insert the new batteries observing correct polarity
4. Replace the back cover.

Specification

Environmental Condition:

-10°C to 40°C, relative humidity 85% non-condensing.

Radio:

868 MHz