

Panic Button

1. Panic / Learn Button
2. LED Indicator

Panic Button (Danish)

1. Panic / Learn Button
2. LED Indicator

Paniikinappi

1. Hälytys / yhdistämisspainike
2. LED merkkivalo

ENGLISH

Getting Started

1. Loosen the screw at button to open back cover, insert the battery provided and close the back cover.
2. Put the Control Panel into learning mode.
3. Press and hold the button for about 3 seconds to learn the Panic Button.
4. Refer to Control Panel manual to complete learning process.

Mounting Location

- Mount in a convenient location for easy access, such as living room or bedroom

Operation

- Press and hold the button for 3 seconds to activate a Panic alarm regardless of system mode.
- The LED will light up when the button is pressed.

Installation

1. Break through knockouts on back cover.
 2. Drill holes into wall using the knockouts as template.
 3. Fix the back cover onto the wall with screws and plugs provided.
 4. Replace the front cover on the back cover
- Instead of screw mounting, you can also use the double side adhesive tape included in the package to install the accessory.

Battery

The Panic Button uses one **CR2032 3V** lithium battery. It features low battery detection function to notify the Control Panel when battery voltage is low.

When the Panic Button is on low battery, follow the procedure below to change the batteries.

1. Open the back cover
2. Remove the old battery
3. Insert the new batteries observing correct polarity
4. Replace the back cover.

Specification

Environmental Condition:

-10°C to 40°C, relative humidity 85% non-condensing.

Radio:

868 MHz

DANISH

Getting Started

1. Loosen the screw at button to open back cover, insert the battery provided and close the back cover.
2. Put the Control Panel into learning mode.
3. Press and hold the button for about 3 seconds to learn the Panic Button.
4. Refer to Control Panel manual to complete learning process.

Mounting Location

- Mount in a convenient location for easy access, such as living room or bedroom

Operation

- Press and hold the button for 3 seconds to activate a Panic alarm regardless of system mode.
- The LED will light up when the button is pressed.

Installation

1. Break through knockouts on back cover.
 2. Drill holes into wall using the knockouts as template.
 3. Fix the back cover onto the wall with screws and plugs provided.
 4. Replace the front cover on the back cover
- Instead of screw mounting, you can also use the double side adhesive tape included in the package to install the accessory.

Battery

The Panic Button uses one **CR2032 3V** lithium battery. It features low battery detection function to notify the Control Panel when battery voltage is low.

When the Panic Button is on low battery, follow the procedure below to change the batteries.

1. Open the back cover
2. Remove the old battery
3. Insert the new batteries observing correct polarity
4. Replace the back cover.

Specification

Environmental Condition:

-10°C to 40°C, relative humidity 85% non-condensing.

Radio:

868 MHz

SUOMI

Käyttöönotto

1. Löysää laitteen takaosan paristokantta kiinnittävää ruuvi, aukaise kansi ja asenna mukana seuraava paristo laitteeseen. Sulje kansi.
2. Aseta keskusyksikkö yhdistämistilaan.
3. Paina ja pidä pohjassa paniikinapin yhdistämisspainiketta noin 3 sekunnin ajan.
4. Katso keskusyksikön käyttöohjeesta lisätietoja.

Asennuspaikka

- Asenna helppopääsyiseen paikkaan kodissa, esim. olohuoneeseen tai makuuhuoneeseen.

Käyttö

- Paina ja pidä näppäintä pohjassa noin 3 sekunnin ajan ja paniikkihälytys suoritetaan riippumatta keskusyksikön toimintatilasta.
- LED merkkivalo syttyy kun näppäintä painetaan.

Asennus

1. Aukaise laitteen takakanteen merkityt ruuvireiät esim. ruuvimeisselillä.
 2. Poraa reiät seinään käyttäen takakantta sapluunana.
 3. Kiinnitä takakansi seinään mukana seuraavilla ruuveilla.
 4. Kiinnitä etukansi laitteeseen.
- Ruuvien asemasta voit myös käyttää mukana seuraavaa kaksipuolista teippiä.

Paristo

Paniikinappi käyttää yhtä **CR2032 3V** litium-paristoa. Se ilmoittaa keskusyksikölle pariston vaihtamistarpeesta. Kun paniikinapin paristo on heikko, vaihda paristo seuraavasti.

1. Avaa takakansi.
2. Poista vanha paristo.
3. Aseta uusi paristo (tarkasta napaisuus).
4. Laita takakansi kiinni.


Tekniset tiedot

Käyttöympäristö:

-10°C - 40°C, ilmankosteus 85% ei-tiivistyvää kosteutta.

Radio:

868 MHz

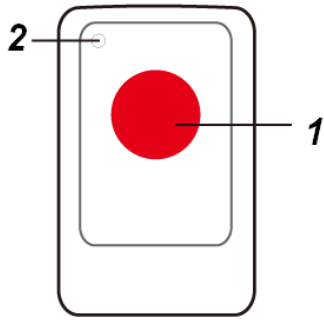

Panic Button (Swedish)

1. Panic / Learn Button
2. LED Indicator

Panic Button (Norwegian)

1. Panic / Learn Button
2. LED Indicator

SWEDISH

Getting Started

1. Loosen the screw at button to open back cover, insert the battery provided and close the back cover.
2. Put the Control Panel into learning mode.
3. Press and hold the button for about 3 seconds to learn the Panic Button.
4. Refer to Control Panel manual to complete learning process.

Mounting Location

- Mount in a convenient location for easy access, such as living room or bedroom

Operation

- Press and hold the button for 3 seconds to activate a Panic alarm regardless of system mode.
- The LED will light up when the button is pressed.

Installation

1. Break through knockouts on back cover.
 2. Drill holes into wall using the knockouts as template.
 3. Fix the back cover onto the wall with screws and plugs provided.
 4. Replace the front cover on the back cover
- Instead of screw mounting, you can also use the double side adhesive tape included in the package to install the accessory.

Battery

The Panic Button uses one **CR2032 3V** lithium battery. It features low battery detection function to notify the Control Panel when battery voltage is low.

When the Panic Button is on low battery, follow the procedure below to change the batteries.

1. Open the back cover
2. Remove the old battery
3. Insert the new batteries observing correct polarity
4. Replace the back cover.

Specification

Environmental Condition:

-10°C to 40°C, relative humidity 85% non-condensing.

Radio:

868 MHz

NORWEGIAN

Getting Started

1. Loosen the screw at button to open back cover, insert the battery provided and close the back cover.
2. Put the Control Panel into learning mode.
3. Press and hold the button for about 3 seconds to learn the Panic Button.
4. Refer to Control Panel manual to complete learning process.

Mounting Location

- Mount in a convenient location for easy access, such as living room or bedroom

Operation

- Press and hold the button for 3 seconds to activate a Panic alarm regardless of system mode.
- The LED will light up when the button is pressed.

Installation

1. Break through knockouts on back cover.
 2. Drill holes into wall using the knockouts as template.
 3. Fix the back cover onto the wall with screws and plugs provided.
 4. Replace the front cover on the back cover
- Instead of screw mounting, you can also use the double side adhesive tape included in the package to install the accessory.

Battery

The Panic Button uses one **CR2032 3V** lithium battery. It features low battery detection function to notify the Control Panel when battery voltage is low.

When the Panic Button is on low battery, follow the procedure below to change the batteries.

1. Open the back cover
2. Remove the old battery
3. Insert the new batteries observing correct polarity
4. Replace the back cover.

Specification

Environmental Condition:

-10°C to 40°C, relative humidity 85% non-condensing.

Radio:

868 MHz